

# PC/XT

Personal Computer  
User's Guide



2-004-406-1

# PC/XT

1. System board installation	21
<b>Personal Computer</b>	41
<b>User's Guide</b>	75
2. Parallel printer card	87
3. Microdrive graphic card	95
4. Floppy disk drive card	111
10. Power supply	118
Appendix:	
Microdrive printer	127



# TABLE OF CONTENTS

<u>1 . Set up your PC/XT</u>	<u>1</u>
<u>2 . Options</u>	<u>7</u>
<u>3 . Overview of the PC/XT system</u>	<u>13</u>
<u>4 . System board instruction</u>	<u>21</u>
<u>5 . Keyboard use</u>	<u>41</u>
<u>6 . Color graphic card</u>	<u>75</u>
<u>7 . Parallel printer card</u>	<u>87</u>
<u>8 . Monochrome graphic care</u>	<u>95</u>
<u>9 . Floppy disk drive card</u>	<u>111</u>
<u>10 . Power supply</u>	<u>119</u>
<u>Appendix:</u>	
<u>Asynchronous communications adapter</u>	<u>127</u>

Remove Shipping  
Cardboard

Place the Processing Unit on a proper level area.

